

➤ High on **savings**  
big on reliability



**Hx2000** | HVAC Drive

Three Phase 415V (0.75 ~ 90kW)

## Two decades of application knowledge

For over two decades, various industry sectors have been reaping the benefits of L&T Electrical & Automation (E&A)'s cost-effective, performance-oriented AC Drive solutions. E&A's grasp of the specific needs of each industry enables it to offer application-specific solutions for various industries such as processing, textile, plastic, ceramic, pharmaceutical, elevator, oil & gas, power, cement and material-handling.



## Hx2000 | HVAC Drive


› The new **reliability** edge

The Hx2000 adds a new dimension to E&A's AC drive solutions. It sets the standard for the industry by introducing an innovative energy reduction, environmental-friendly system that delivers outstanding energy savings for fan, pump and compressor applications in an HVAC system.



Built to E&A's stringent quality standards, the Hx2000 is tested and certified to meet global benchmarks, thus giving you the assurance of total reliability. It handles loads from 0.75kW to 90kW, and is engineered to keep your process operating at optimum efficiency, even in the hot, humid and dusty conditions that characterise India's industrial environment.



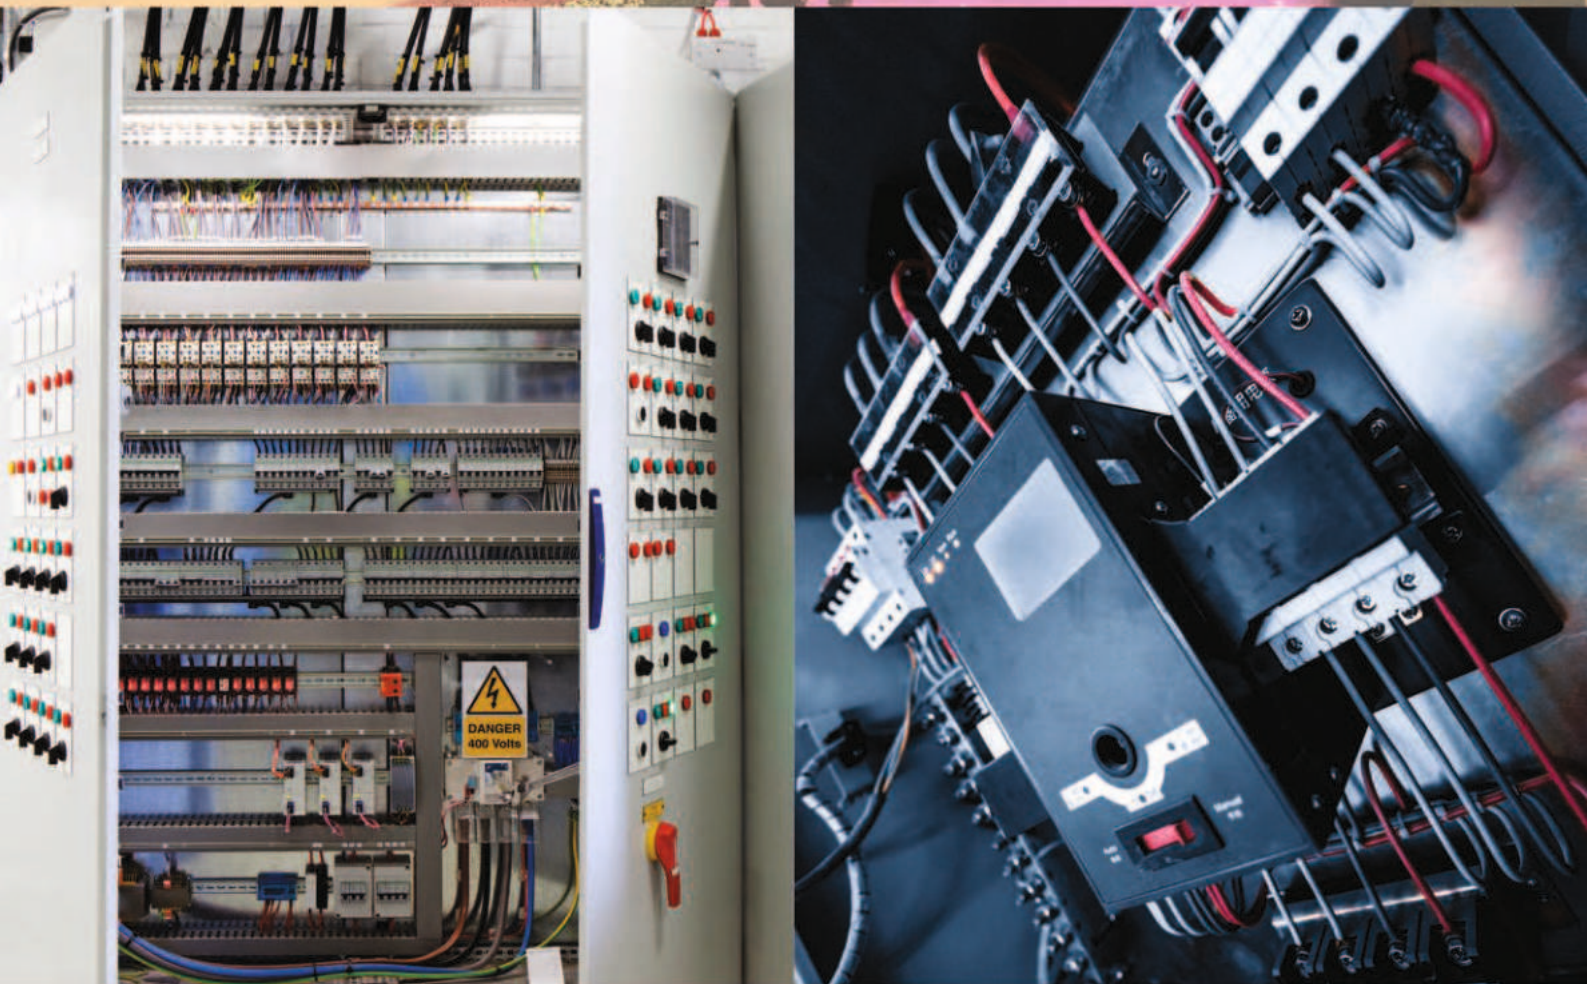

## ➤ **Backed** by engineering knowledge across seven decades

A knowledge-based company, E&A brings you the benefits of over 75 years of engineering experience and expertise, and the richness of its collaborations with technology leaders across the globe.

For 50 years, E&A's low-tension switchgear – India's widest range – has been the preferred option of top industrial houses countrywide.



## ➤ **Meeting** your needs, **solving** your problems

We believe in addressing your needs and not just selling a product. That's why a dedicated Solutions Team first focuses on understanding your application. Then, helps you select the drive that best meets your needs. Our advice on installation, maintenance and replacement will ensure that your HVAC system functions at peak efficiency. From engineer to repair technician, our people have the knowledge and skill-sets to deliver total peace of mind.











## ➤ **Tested. Certified. Reliable.**

E&A is one of the few switchgear manufacturers in India with a dedicated, NABL-certified testing facility. Our products are tested for conformity to standards that exceed minimum requirements, giving you the assurance of high-quality performance. Our focus on continuous improvement ensures that our standards are on par with the best in the world. Repeat orders endorse the value that we deliver.

The reliability of the Hx2000 is ensured by international test certification – UL (Plenum Rated), CE, RoHS.

## ➤ **After-sales service** aimed at maximum uptime

A malfunction of the drive can bring an entire assembly-line or process to a halt. To ensure maximum uptime for you, our Rapid Response Service Team is available to analyze the situation and help you set the problem right. We have set up strategic service centres across the country to provide temporary replacement drives or ready spares to ensure that your business keeps running smoothly.

### Rapid Response Service Team







## ➤ **Training your people** to enhance your operations

At our countrywide Switchgear Training Centres, we can train your operators, electricians and supervisors to increase their effectiveness in the operation, maintenance and trouble-shooting of your drives. We can also conduct in-plant training and workshops at your premises to improve both power management and equipment maintenance skills. This ensures total operational excellence, minimising downtime.

E&A's engineers and channel partners also upgrade their skills through seminars, workshops, training sessions and white papers on electrical practices.

## ➤ **Features** that ensure performance

- V/F, Slip Compensation
- Built-in RTC for Scheduling
- Password Protection
- Built-in EMC filter class C3
- Optional EMC filter class C1/C2
- Built-in DC reactor
- Fire Mode
- Multi-Motor Control
- Built-in Payback Counter
- Lubrication Control
- Pump Clean Function
- Dry Pump Detection
- Built-in 4 PID
- Flow Compensation
- Built-in RS-485 Communication
  - BACnet, Modbus-RTU, Metasys N2
- Global Specifications Compliant-CE, UL (Plenum Rated)






# Hx2000

Provides Optimised Solutions  
for Global Systems

## Multi Motor Control (MMC)

MMC is used when a single drive is used to control multiple motors in pump systems. It controls 1 main motor and 5 auxiliary motors as a default and upto 8 auxiliary motors with option card.

The main motor is connected to the drive output and is controlled by the built-in PID controller. Auxiliary motors are connected with the supply power and are turned ON/OFF by a relay within the drive.

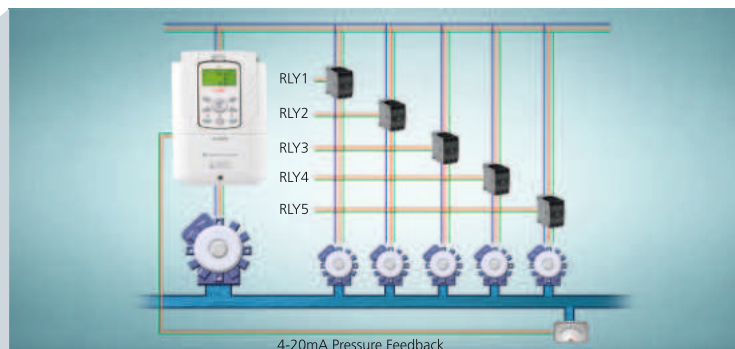


## Time Event Scheduling: Real Time Clock (RTC)

RTC is used so that selected functions are operable during the set time. The user needs to configure the following:

- 4 Time Period Modules (Weekly)
- 8 Time Events
- 8 Exception Dates (Day)


(Possible to set 29 functions including FWD (Fx), REV (Rx), multiple acceleration/deceleration times, multiple frequencies, PID related functions and pre-heat)  
Summer time available (Start/End date setting)

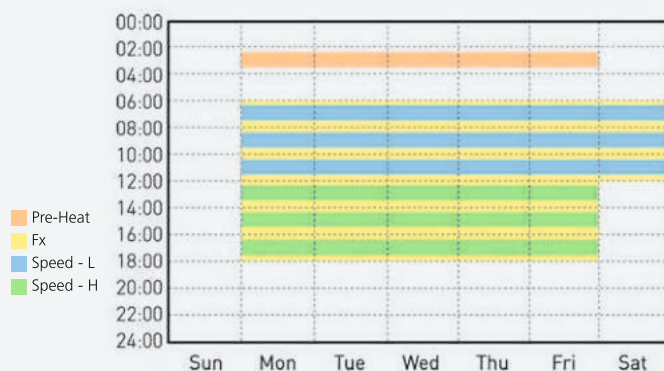

## 4 Process PIDs (1 Main + 3 EPIDs)


Main PID uses inputs from sensors to measure variables like pressure, temperature/humidity and flow, to change the motor speed by varying the output frequency to achieve the desired process output.

Three external PIDs control the external equipments of the HVAC system such as dampers, valves based on the feedback from CO<sub>2</sub>, Rh, temperature, pressure & other sensors.

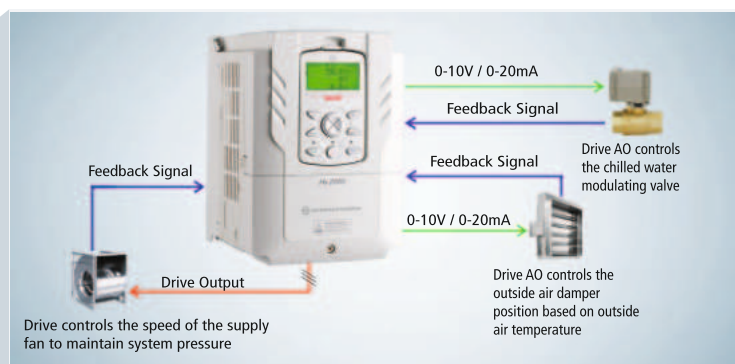

## Dry Pump (Under Load Protection)

It prevents pump damage when there is insufficient water in the tank. If the actual load is below the Under Load (UL) Detect curve, the drive will trigger a warning or trip signal to protect the pump.

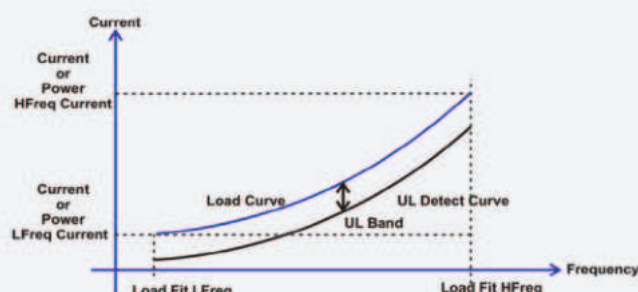



RARCAP2 N STP 0.0HZ  
89 Cost per kWh 1.0 kWh  
90 Saved kWh 612.8 kWh  
91 Saved MWh 14 MWh

DIGITAL OPERATOR  
**HVAC**

## ➤ Energy Saving

The energy saving information is displayed as kWh, saved energy cost and CO<sub>2</sub> emission level on the drive keypad.





## ➤ Keypad Exclusive for HVAC

Used to issue commands, configure drive parameters, and for monitoring drive status

- HAND Mode (Local Control Mode) or AUTO Mode (Remote Control Mode) can be selected
  - HAND Mode: Used when selecting frequency or run/stop commands
  - AUTO Mode: Drive operated using the keypad, multifunctional terminal block and communications
- Fault Status Monitoring



### Cancel (ESC) Key

- While in the Edit state, previously saved data is used
- When pressed while switching codes within the group, it is switched to the very first mode of the group
- When pressed while switching modes, it reverts back to the monitor mode

### Program (PROG/ENT) Key

- When pressed once, it is changed to the Parameter Edit state
- When pressed after changes, the changed data is saved

### Left/Right Key

- It is used to switch between groups (Cursor is used in the Edit state)

### Up/Down Key

- It is used to switch between codes and edit data values

### Hand (HAND) Key

- It is used to select Keypad (HAND) operation
- Speed control (HAND key–UP/DOWN)

### Off (OFF) Key

- OFF mode or fault reset

### Multifunction (MULTI) Key

- It is used to register user codes

### Auto (AUTO) Key

- It is used to select AUTO mode operation

## ➤ Built-in EMC Filter

A built-in EMC filter meets the specifications for noise reduction

- 400V 0.75~90kW Built-in as default (Class C3) & optional (Class C1/C2)

## ➤ Built-in DC Reactor

A built-in DC Reactor effectively improves the power factor and reduces the THD

- Built-in as standard for 400V 37~90kW & Optional AC/DC reactor upto 30kW

## ➤ Global Specifications Compliant

UL (Plenum Rated)


(American standards for conditioner fire safety)

- Suitable for installation in a compartment handling conditioned air




## Soft Fill Operation

Prevents pump damage caused by excessive pressure building-up in the pipe system at the time of initial operation of pumps or inside the pumps.

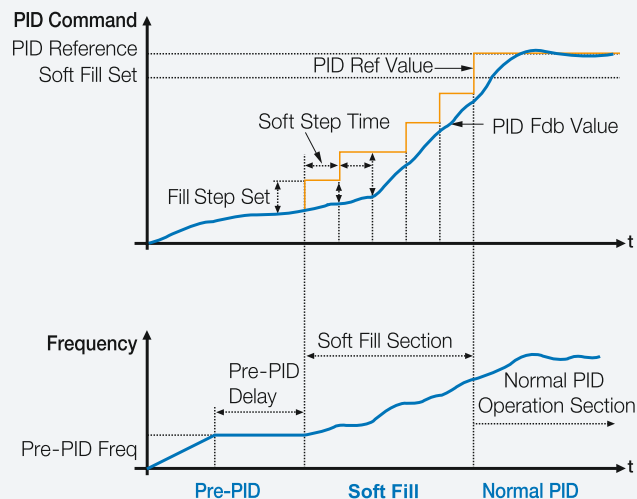


## Start Ramp & End Ramp

Prevents pump damage by changing ramp using acceleration/deceleration time setting upon initial pump operation and stopping.

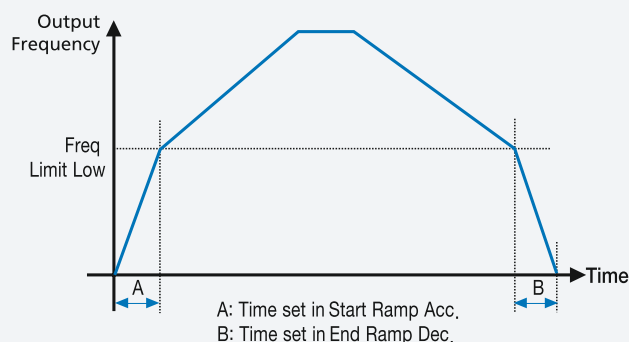

## Deceleration Valve Ramp

Prevents pump and pipe damage caused by sudden pressure changes when pumps are stopped or a pump valve is closed, based on specific requirements, deceleration time can be set.

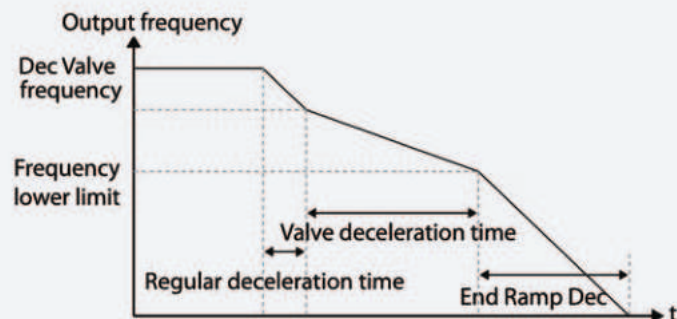



### ➤ Easy-to-Change Cooling Fan

It is easy to change a cooling fan without opening the cover of the drive.



### ➤ Flange-Type Mounting


If the space is too small, a heat sink can be installed outside the panel. This helps reduce heat losses inside the panel.



### ➤ Side-by-Side Installation

The size of the control board is significantly reduced when multiple drives are installed by minimising the distance between them.  
(Side-by-side installation is unavailable for 37~90kW)



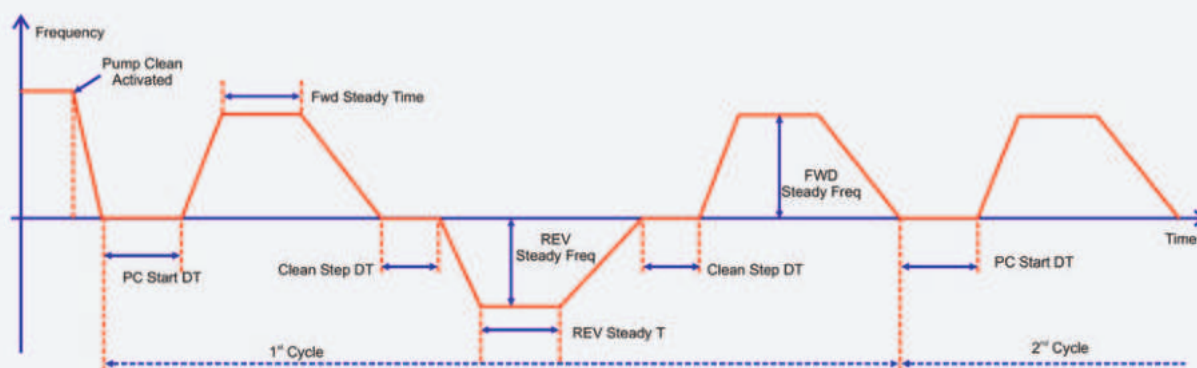

DT - Delay Time

### ➤ Pump Clean Function

Scraps and deposits that get built up in impellers inside pumps, decrease the efficiency of a motor's performance. Through consecutive FWD/REV or ACC/DEC operations, the scraps get eliminated. This results in extension of the pump's lifespan, prevents pre-mature pump failure and ensures energy savings. The Pump Clean mode is initiated by a remote signal, current profile or power profile.

### ➤ Payback Counter (Energy Saving Display)

It displays energy saving information by comparing the average energy efficiency for operation with and without the drive. The energy saving information is displayed as kWh, saved energy cost and CO<sub>2</sub> emission level.

### ➤ Load Tuning

Establishes load (current and power) curves based on the drive frequency, so as to make the load characteristics curve required for 'Under Load' and 'Pump Clean' modes.

### ➤ Fire Mode

This function is used to allow the inverter to ignore minor faults during emergency situations, such as fire and provides continuous operation to protect other systems.

### ➤ Detection of Broken Pipe

This function detects pipe breaks when the PID operation is ON. The fault trip or a warning signal will occur if the feedback does not reach the level set by the user during the operation with the maximum output (PID maximum output or the maximum speed set).


### ➤ Aux Motor PID Compensation

In-pipe flow increases and conduit pressure decreases as the number of auxiliary motors increases. To counter this, Aux Motor PID Compensation is used to compensate for the pressure loss.

### ➤ Power-on Resume

When the drive restarts after it was stopped due to power interruption, the drive memorises the status command, frequency reference and ACC/DEC time settings upon loss of communication control. As soon as power is resumed, 'Power-on Resume' is used to follow the previous control command.



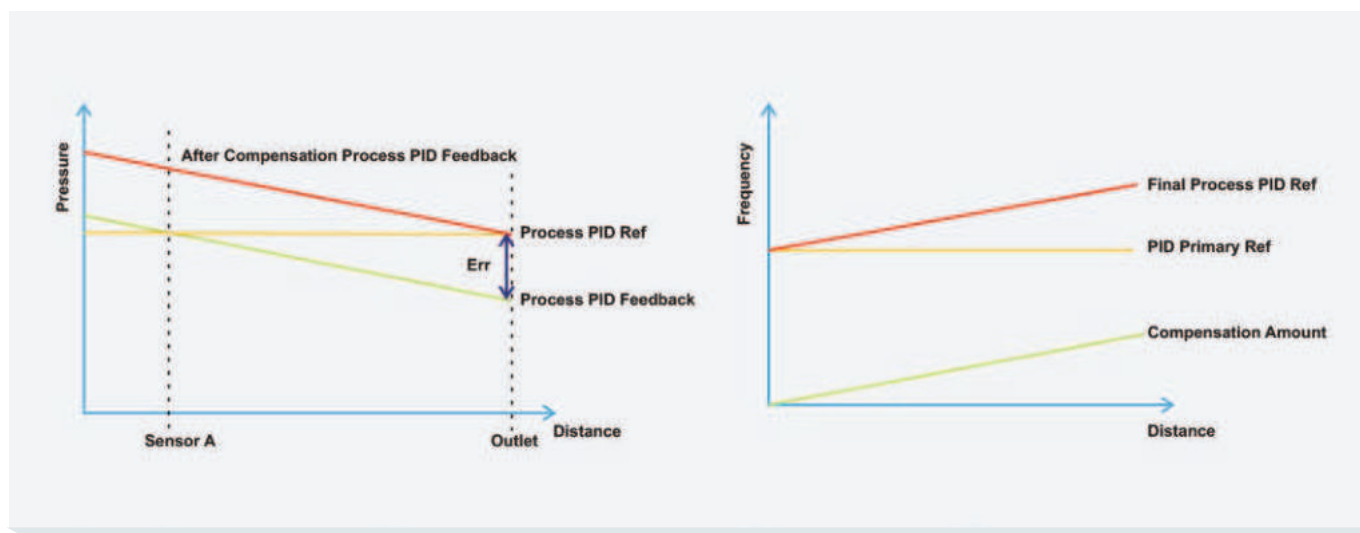

### ➤ Flow Compensation

In a system with longer pipes and a higher flow rate, a drop in pressure is often experienced. This feature helps to compensate for the pressure drop by increasing the PID reference.

### ➤ Lubrication Control

During a lubrication operation, the drive outputs the lubrication signal through one of the output relays when the drive receives a RUN command. The drive does not start operating until the time set at 'Lubrication OP Time' has elapsed and the Lubrication signal is turned OFF.

### ➤ Level Detection

When the drive is operated above or below the user defined values i.e., beyond the set frequency and source (voltage, current) values the drive generates a trip or activates a relay for protective operation.

### ➤ Damper Control

If a fan and a damper are used together in a system, the drive may be configured to operate according to the damper's operation status. During damper operation, one of the relay outputs (Relay 1–5) may be set to 'Damper Control' to output a signal based on the damper's operation status. One of the multi-function terminal inputs may also be set 'Damper Open' to receive the damper status input. The drive starts operating when both the RUN command and the 'Damper Open' signal are turned ON.

### ➤ Macro Setting

The Macro selection function is used to put various application functions together in a group. For applications with the Hx2000 drive, 7 Macro configurations are available i.e. Basic, Compressor, Supply Fan, Exhaust Fan, Cooling Tower, Circulation Pump, Vacuum Pump and Constant Torque.

### ➤ Pre-Heat Function

Pre-heats motors by outputting direct current when the motors or pumps are not in operation, in order to prevent condensation of the motors or pumps.

### ➤ PID Sleep and Wake-up function

It is used to put the drive on standby and restart it using PID as per the load requirement in order to reduce motor losses as much as possible.


## Communication Module

Built-in RS485 communication: • **BACnet** • **Modbus-RTU** • **Metasys N2**

Optional: **LonWorks**

## Software Exclusive for E&A Drives

DriveConnect can be connected using USB Port or RJ45 terminal.

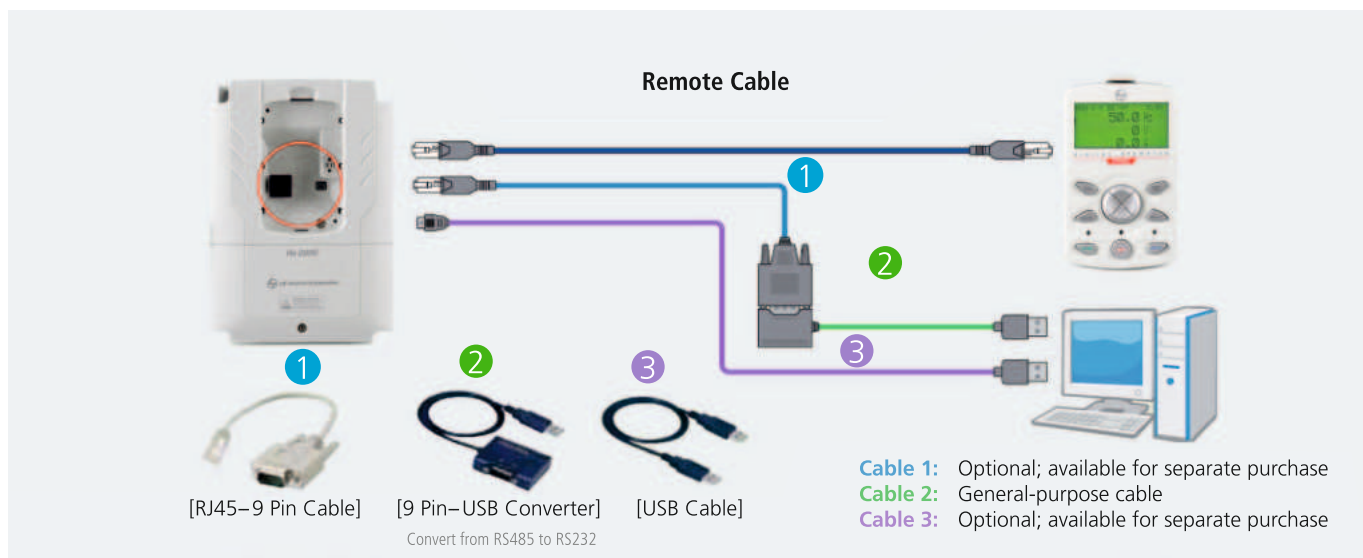

## Optional I/O Expansion Card





Motor Rating (Normal Duty)	Three-Phase 415V	ND Current (A)
0.75kW	LTVF-H40002BAA	2
1.5kW	LTVF-H40004BAA	4
2.2kW	LTVF-H40006BAA	6
3.7kW	LTVF-H40008BAA	8
5.5kW	LTVF-H40012BAA	12
7.5kW	LTVF-H40016BAA	16
11kW	LTVF-H40024BAA	24
15kW	LTVF-H40030BAA	30
18.5kW	LTVF-H40038BAA	38
22kW	LTVF-H40045BAA	45
30kW	LTVF-H40061BAA	61
37kW	LTVF-H40075BAA	75
45kW	LTVF-H40091BAA	91
55kW	LTVF-H40107BAA	107
75kW	LTVF-H40142BAA	142
90kW	LTVF-H40169BAA	169

LTVF	H	4	0006	B	A	A
L&T Electrical & Automation Variable Frequency Drive	Series Hx2000	Input Voltage 4 Three-Phase 380~480[V]	Drive Current Rating Normal Duty Amp	Enclosure B IP20	Keypad A With	Reserved

➤ Input and Output Specifications: **Input Voltage Three-Phase 415V (0.75 to 90kW - ND)**

LTVF-H4□□□□BAA			0002	0004	0006	0008	0012	0016	0024	0030	0038	0045	0061	0075	0091	0107	0142	0169
Applied Motor (kW)		kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90
		HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100	120
Output Ratings	Rated Current [A]	ND	2.5	4	6	8	12	16	24	30	38	45	61	75	91	107	142	169
	Rated Capacity [kVA]		1.9	3.0	4.5	6.1	9.1	12.2	18.3	23.0	29.0	34.3	46.5	57.1	69.4	82.0	108.2	128.8
	Output Frequency		0 ~ 400 [Hz]															
	Output Voltage [V]		3-phase 380 ~ 480V															
Input Ratings	Available Voltage [V]		3-phase 380 ~ 480 VAC (-15%, +10%)															
	Input Frequency		50 ~ 60 [Hz] (±5%)															
	Rated Current [A]	ND	2.4	4.2	6.5	8.7	12.2	17.5	26.5	33.4	42.5	50.7	69.1	69.3	84.6	100.1	133.6	160.0

## Standard Specifications

Rated Input Voltage	3-phase 380 ~ 480 VAC (-15%, +10%)
Rated Frequency	50 ~ 60 [Hz] (±5%)
Max Output Voltage	Proportional to Input Voltage
Max Output Frequency	0 to 400Hz
Keypad	LCD Detachable
DC Reactor	Built-in standard for 400V 37~90kW & Optional AC/DC reactor upto 30kW
EMC Filter	Built-in as default (C3) & optional (C1/C2)
Features	Multi Motor Control, Built-in RTC, USB Port, HVAC Macros, Built-in PID, Lubrication Control, Motor Pre Heat, KEB, Auto Restart, Sleep & Wake-up Function, Damper Control, Belt Broken Detection, Pump Clean Mode, Flow Compensation Mode, Dry Pump Detection, Password Protection, Payback Counter (Energy Saving on Display), Fire Mode

## Control

Control Method	V/F control, slip compensation
Frequency Setting Resolution	Digital command: 0.01 Hz Analog command: 0.06 Hz (60 Hz standard)
Frequency Settings	Analog type: -10~10 V, 0~10 V, 0~20 mA Digital type: keypad, pulse train input
V/F Pattern	Liner, squared overload reduction and user V/F
Overload Capacity	Rated current for 120% for 1 minute
Torque Boost	Manual torque boost, automatic torque boost 1, automatic torque boost 2
Output Frequency Resolution	0.01Hz
Accel/Decel Time	0.0 to 6000.0 (sec)
Frequency Accuracy	1% of maximum output frequency

## Operation

Operating Method		Selectable among keypad/terminal block/communication operation			
Operating Functions		PID control, 3-wire operation, Frequency limit, Second motor function, Anti-forward and reverse, direction rotation, Commercial transition, Speed search, Power braking, Leakage reduction, Up-down operation, DC braking, Frequency jump, Slip compensation, Automatic restart, Automatic tuning, Energy buffering, Flux braking, Energy Saving			
Input	Multi-function terminal P1-P7	7No. Programmable NPN (Sink) / PNP (Source)			
		<b>Function:</b> Forward direction operation, Reset, Emergency stop, Multi step speed, frequency-high/med/low, Reverse direction operation, External trip, Jog operation, Multi step acc/dec , Second motor selection, DC braking during stop, Frequency increase, Frequency decrease,3-wire, Select acc/dec/stop, MMC Interlock, Frequency reduction, Fix analog command frequency, Transition from PID to general operation Pre Heat, Pump Cleaning, RTC (Time Event)			
	Analog input	2 No., -10 ~ 10 Vdc : 1 No. 0 ~ 20 mA / -10 ~ 10Vdc : 1 No.			
	Pulse Train input	0 to 32 kHz			
Output	Multi-function open collector terminal	Fault output and drive operation status output		1 No., Less than DC 26 V, 50 mA	
	Fault Signal relay			1 No.	N.O.: Less than AC 250 V      2A, DC 30 V, 3A
					N.C.: Less than AC 250 V      1A, DC 30 V 1A
	Multi-function relay	4 No., Less than AC 250 V, 5 A Less than DC 30 V, 5 A			
	Analog output	2 No., 0 ~ 10 Vdc / 0 ~ 20 mA : 1 No. -10 ~ 10 Vdc : 1 No.			
Pulse Train output	0 to 32 kHz				
RS-485 Communication		Built-in BACnet, Modbus-RTU, Metasys N2 as standard			

## Protective Functions


Trip	Over-current trip, Trip caused by external signals, ARM short-circuit current trip, Overheat trip, Pipe broken trip, Input open-phase trip, Ground trip, Motor overheat trip, IO board connection trip, No motor trip, Parameter write trip, Emergency stop trip, Command loss trip, CPU watchdog trip, Motor under-load trip, Overvoltage trip, Temperature sensor trip, Drive overheat, Option trip, Output open-phase trip, Drive overload trip, Fan trip, Low voltage trip during operation, Low voltage trip, Analog input error, Motor overload trip, Keypad command loss trip, Damper trip, Level detect trip, All auxiliary motor failure trip, Pump clean failure (fault)
Alarm	Command loss trip alarm, overload alarm, normal load alarm, drive overload alarm, fan operation alarm, resistance braking rate alarm, Capacitor life alarm, Pump Clean alarm, Fire Mode Alarm, LDT Alarm.
Momentary Power Loss Ride through	Less than 8 ms: Continue Operation (must be within the rated input voltage and rated output range) More than 8 ms: Auto restart operation

## Structure & Environment

Area of Use	Indoors. Prevent contact with corrosive gases, inflammable gases, oil stains, dust, and other pollutants (Pollution Degree 2 Environment)
Type of Cooling	Forced fan cooling structure
Enclosure Type	IP20 / UL Open(default), UL Enclosed Type 1(option)
Ambient Temperature	-10°C to 40°C
Storage Temperature	-20°C ~ 65°C
Application Humidity	Upto 95% of relative humidity (with no dew formation)
PCB Protection	Conformal Coating complying to IEC 60721-3-3 class 3C3 (avg)
Altitude	1,000m or below
Vibration	9.8m/sec <sup>2</sup> (1.0G) or below
Global Compliance	CE, RoHS, UL (Plenum Rated)




**0.75 to 90kW**

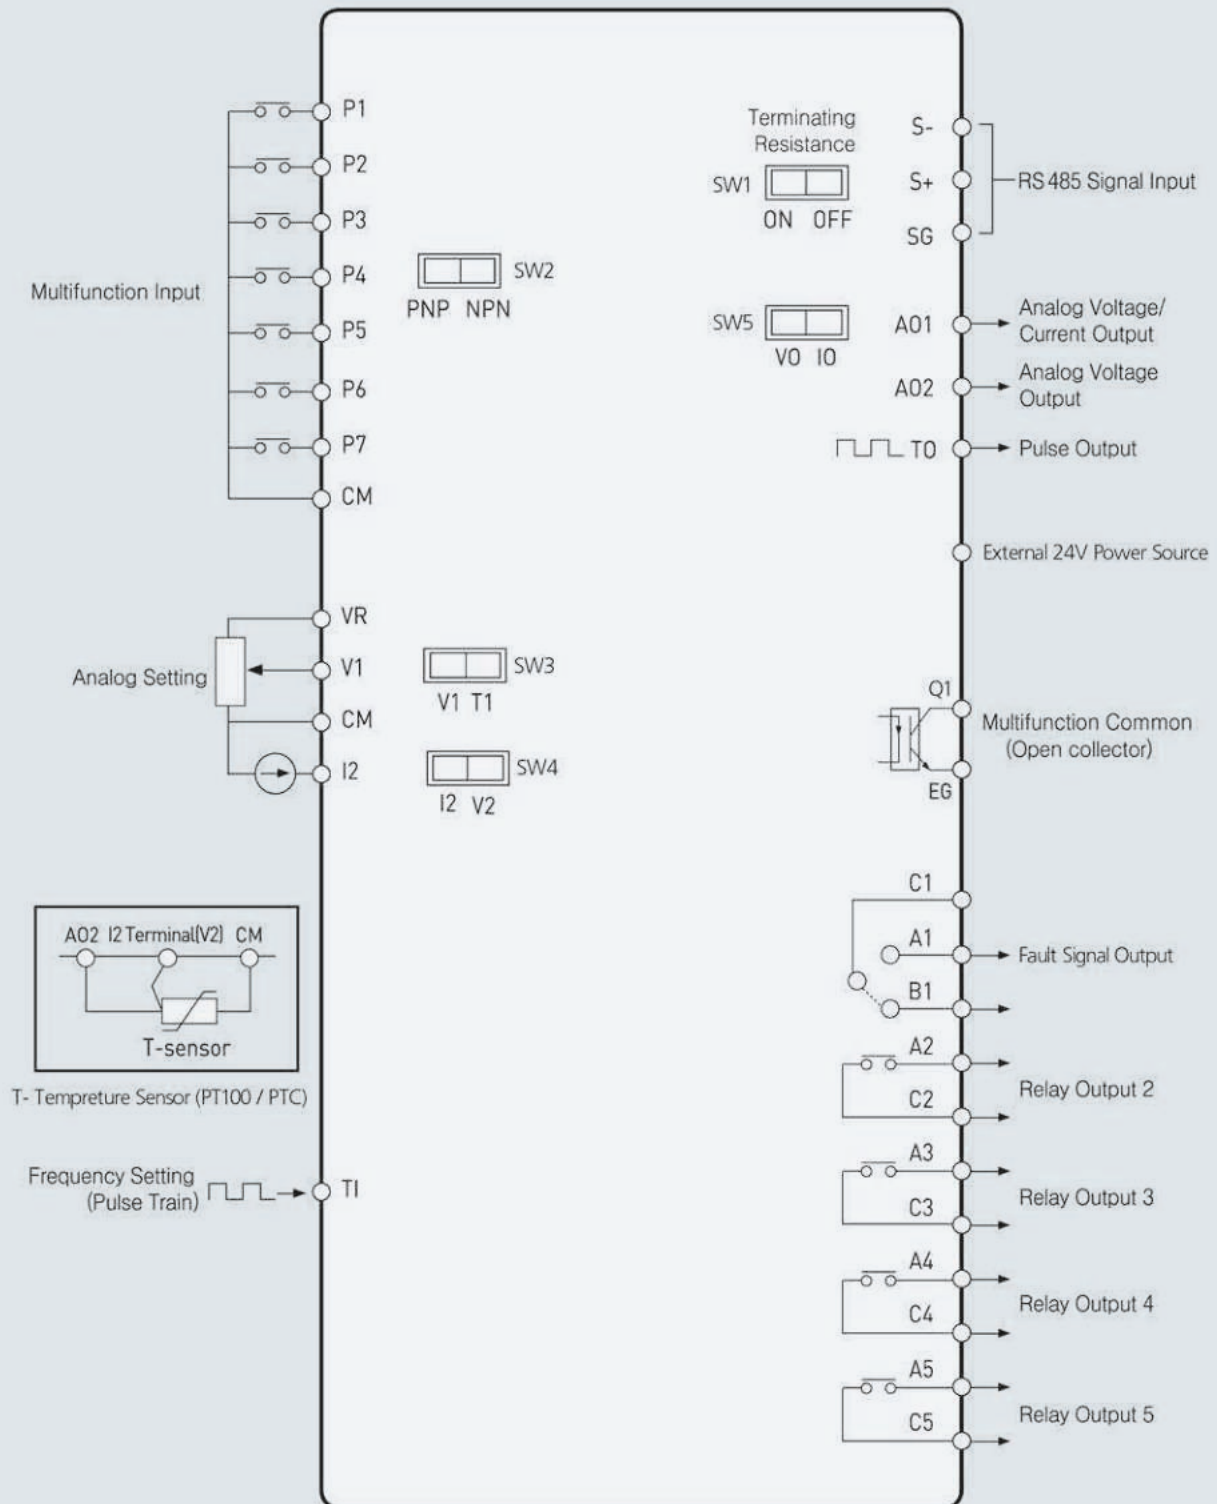

	Classification	Symbol	Name	Description
Input Terminal Details	Selection of contact points	P1~P7	Multifunctional Input 1~7 Terminal	It can be used by setting multifunctional input. Default values from the factory are as follows: <ul style="list-style-type: none"> <li>• P1: Fx</li> <li>• P2: Rx</li> <li>• P3: BX</li> <li>• P4: RST</li> <li>• P5: Speed-L</li> <li>• P6: Speed-M</li> <li>• P7: Speed-H</li> </ul>
		CM	Sequence Common Terminal	Common terminal of contact point input and analog I/O terminal
	Analog Input	VR	Power Terminal for Frequency Setting	Power for analog frequency setting: <ul style="list-style-type: none"> <li>• Max. output voltage: 12V</li> <li>• Max. output current: 12mA</li> <li>• Volume resistivity: 1~10kΩ</li> </ul>
		V1	Frequency Setting(Voltage) Terminal	Frequency is set depending on the voltage supplied to V1 terminal. <ul style="list-style-type: none"> <li>• Unipolar: 0~10V(Max. 12V)</li> <li>• Bipolar: -10~10V(Max. ±12V)</li> </ul>
		I2	Frequency Setting (Current/Voltage) Terminal	Frequency is set depending on the current capacity supplied to I2 terminal. V2 can be used by selecting analog voltage/current input terminal setting switch (SW4). <ul style="list-style-type: none"> <li>• Input current: 0~20mA</li> <li>• Max. input current: 24mA</li> <li>• Input resistance 249Ω</li> <li>• Input voltage: 0~10V</li> </ul>
	Pulse Train	TI	Frequency Setting Terminal	Frequency is set as 0~32kHz. Low Level : 0~0.8V, High Level : 3.5~12V
Output/Communication Terminal Details	Selection of contact points	Q1	Multifunctional (Open Collector) Output/ Pulse Output Terminal	As a multifunctional output signal or pulse output, one of the following is chosen: Output frequency, output current, output voltage and DC voltage. DC 26V, 50mA or below Pulse output terminal <ul style="list-style-type: none"> <li>• Output frequency: 0~32kHz</li> <li>• Output voltage: 0~12V</li> </ul>
		EG	Common Terminal	<ul style="list-style-type: none"> <li>• Common ground terminal for external power of open collector</li> </ul>
		24	24V Power Terminal *	<ul style="list-style-type: none"> <li>• Max. output current: 100mA</li> <li>• Do not use external 24V except for PNP-mode terminal block</li> </ul>
		A1/C1/B1	Abnormal Signal Output/Multifunctional Output Terminal	When power is cut-off to protect the product, signals or multifunctional signals are output. (N.O. : AC250V 2A or below, DC 30V 3A or below N.C. : AC250V 1A or below and DC 30V 1A or below) <ul style="list-style-type: none"> <li>• At abnormal state: A1-C1 connected (B1-C1 disconnected)</li> <li>• At normal state: B1-C1 connected (A1-C1 disconnected)</li> <li>• Factory default value: Frequency</li> </ul>
		A2/C2 ~ A5/C5	Multifunctional Relay Output A Contact Point	Multifunctional output terminal such as signals at operation is defined and used.(AC 250V 5A or below and DC 30V 5A or below)
	Analog Output	A01	Voltage/Current Output Terminal	One of the following is chosen and output: Output frequency, output current, output voltage and DC voltage. The following voltage/current output can be chosen by selecting analog voltage/current output terminal setting switch (SW5). <ul style="list-style-type: none"> <li>• Output voltage: 0~10V</li> <li>• Max. output voltage/current: 12V, 10mA</li> <li>• Output current: 0~20mA</li> <li>• Max. output current: 20mA</li> <li>• Factory default value: Frequency</li> </ul>
		A02	Voltage Output Terminal	-10 ~ 10 Vdc
	Pulse Train	T0	Frequency Setting Terminal	Frequency is set as 0~32kHz. Low Level : 0~0.8V, High Level : 3.5~12V
	Communication Terminal	S+/S-/SG	RS485 Signal Input Terminal	RS485 signal line

Note: \* Available only when used in PNP mode

### 0.75~30kW(3-Phase)

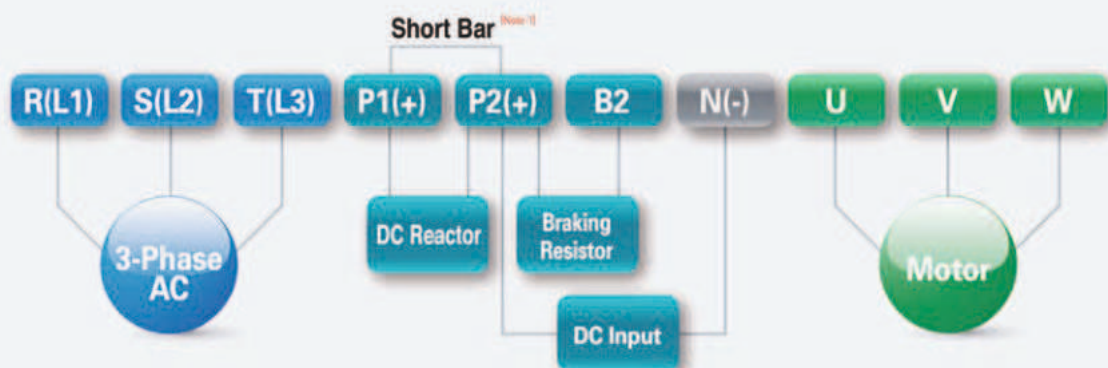

Terminal Mark	Name	Description
R(L1)/S(L2)/T(L3)	AC Power Input Terminal	It connects to commercial AC power
P1+	+DC Link Terminal	+ DC voltage terminal: This terminal is used to connect an exterior DC reactor
P2+	+DC Input Terminal	DC(+) is connected when DC is input via drive power
N-	-DC Link Terminal	DC voltage terminal: DC(-) is connected when DC is input via drive power
B2	Damping resistance connection terminal	It connects to damping resistance <sup>Note 2</sup>
U/V/W	Motor output terminal	It connects to 3-phase induction motor


If you want to run the drive using DC input, connect DC input to P2(+) and N(-) terminal

Note 1: Short Bar should be removed when wiring DC Reactor

Note 2: In case of using with an external DC reactor, only P2(+) terminal connection is allowed

In case of not using with an external DC reactor, P1(+) or P2(+) terminal connection is allowed

### 37~90kW(3-Phase)

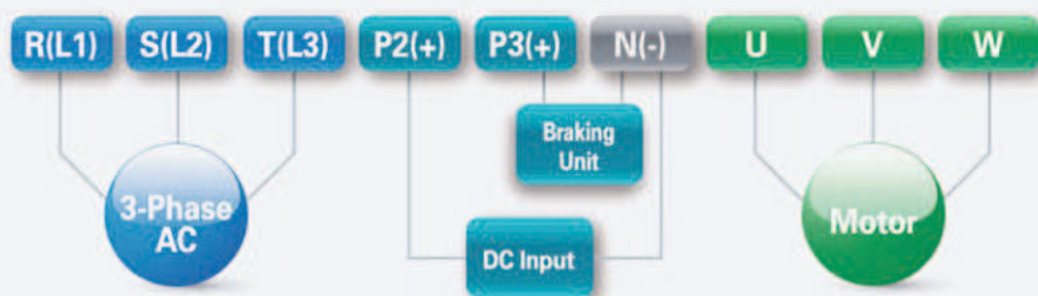

Terminal Mark	Name	Description
R(L1)/S(L2)/T(L3)	AC Power Input Terminal	It connects to commercial AC power
P2+	+DC Link Terminal	+ DC voltage terminal: DC(+) is connected when DC is input via drive power
P3+	+DC Input Terminal	+DC voltage terminal This terminal is used to connect DBU
N-	-DC Link Terminal	DC voltage terminal: DC(-) is connected when DC is input via drive power
U/V/W	Motor output terminal	It connects to 3-phase induction motor

If you wish to start the drive using DC input, connect it to the P2(+), N(-) terminal



## ➤ Incomer (MPCB / MCCB) & Magnetic Contactor (MC)


Motor (ND) kW	CAT Nos.	AC Drive Current	Specification of Breaker (MPCB / MCCB)		Magnetic Contactor (MC)	
			Type	A	Type	A
0.75	LTVF-H40002BAA	2	MOG-S1/MOG-H1	4 - 6.3	MNX	9
1.5	LTVF-H40004BAA	4	MOG-S1/MOG-H1	6.3 - 10	MNX	9
2.2	LTVF-H40006BAA	6	MOG-S1/MOG-H1	6.3 - 10	MNX	9
3.7	LTVF-H40008BAA	8	MOG-H1	11.0 - 16.0	MNX	18
5.5	LTVF-H40012BAA	12	MOG-H1	14 - 20	MNX	18
7.5	LTVF-H40016BAA	16	MOG-H1	24 - 32	MNX	25
11	LTVF-H40024BAA	24	MOG-H2	28 - 40	MNX	40
15	LTVF-H40030BAA	30	MOG-H2	35 - 50	MNX	45
18.5	LTVF-H40038BAA	38	MOG-H2	45 - 63	MNX	50
22	LTVF-H40045BAA	45	DN0 - 100M	80	MNX	70
30	LTVF-H40061BAA	61	DN0 - 100M	100	MNX	80
37	LTVF-H40075BAA	75	DN1 - 160M	125	MNX	110
45	LTVF-H40091BAA	91	DN1 - 160M	160	MNX	140
55	LTVF-H40107BAA	107	DN2 - 250M	200	MNX	185
75	LTVF-H40142BAA	142	DN2 - 250M	250	MNX	225
90	LTVF-H40169BAA	169	DN3 - 400M	320	MNX	265

Note:

- 1) MC (Magnetic Contactor) current is 1.3 ~ 1.5 times of drives rated current
- 2) MCCB should be used to protect against overload and damage of drive installation from the fault current
- 3) From 22kW to 90kW MCCB dsine with frame size DN0 to DN3 with thermal-magnetic release

## ➤ Selection Chart for Input and Output Choke

Motor (ND) kW	CAT Nos.	AC Drive Current	Chokes					
			I/P AC Reactor		DC Reactor		O/P Reactor	
			Inductance (mH)	Current (A)	Inductance (mH)	Current (A)	Inductance (mH)	Current (A)
0.75	LTVF-H40002BAA	2	4.8	4.8	16	4.27	8.1	3
1.5	LTVF-H40004BAA	4	4.8	4.8	16	4.27	6.54	5
2.2	LTVF-H40006BAA	6	3.23	7.5	12	6.41	3.71	7
3.7	LTVF-H40008BAA	8	2.34	10	8	8.9	2.45	9
5.5	LTVF-H40012BAA	12	1.22	15	5.34	14	1.9	12
7.5	LTVF-H40016BAA	16	1.22	18	3.2	17	1.1	18
11	LTVF-H40024BAA	24	0.78	27	2.5	25	0.81	25
15	LTVF-H40030BAA	30	0.59	35	1.9	32	0.54	35
18.5	LTVF-H40038BAA	38	0.46	44	1.4	41	0.45	40
22	LTVF-H40045BAA	45	0.4	52	1.0	49	0.36	46
30	LTVF-H40061BAA	61	0.3	68	0.7	64	0.29	62
37	LTVF-H40075BAA	75	0.23	98	Built-in		0.23	78
45	LTVF-H40091BAA	91	0.195	118			0.2	95
55	LTVF-H40107BAA	107	0.157	142			0.16	115
75	LTVF-H40142BAA	142	0.122	196			0.12	160
90	LTVF-H40169BAA	169	0.096	237			0.12	190

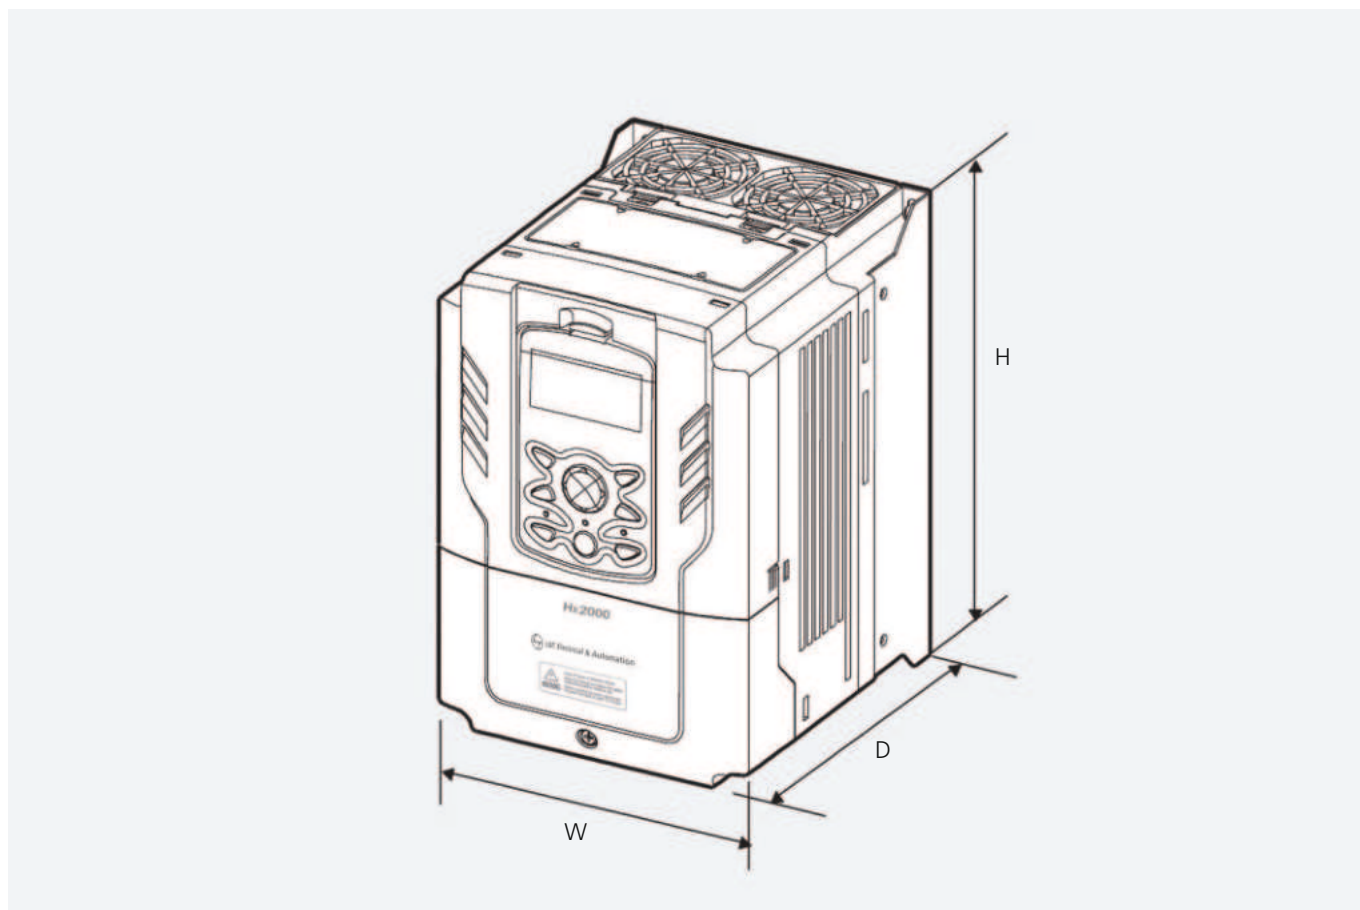

Input Voltage	Drive Model	W (mm)	H (mm)	D (mm)	Weight (kg)
Three-Phase 415 V	LTVF-H40002BAA	160	232	181	3.3
	LTVF-H40004BAA	160	232	181	3.3
	LTVF-H40006BAA	160	232	181	3.3
	LTVF-H40008BAA	160	232	181	3.3
	LTVF-H40012BAA	160	232	181	3.3
	LTVF-H40016BAA	160	232	181	3.3
	LTVF-H40024BAA	160	232	181	3.4
	LTVF-H40030BAA	180	290	205.3	4.6
	LTVF-H40038BAA	180	290	205.3	4.8
	LTVF-H40045BAA	220	350	223.2	7.5
	LTVF-H40061BAA	220	350	223.2	7.5
	LTVF-H40075BAA	275	450	284	26
	LTVF-H40091BAA	325	510	284	35
	LTVF-H40107BAA	325	510	284	35
	LTVF-H40142BAA	325	550	309	43
	LTVF-H40169BAA	325	550	309	43

Note: The above drawings are solely for reference. Please refer to the technical manual for more details.

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



## Electrical Standard Products (ESP) Offices:

### HEAD OFFICE

L&T Electrical & Automation  
L&T Business Park, TC 2, Tower 'B'  
3rd Floor, Gate No 5  
Saki Vihar Road, Powai  
**Mumbai 400 072**  
Tel: 022-67052874 / 2737 / 1156  
e-mail: cic@LNTEBG.com

### BRANCH OFFICES

L&T Electrical & Automation  
501, Sakar Complex I  
Opp. Gandhigram Rly. Station  
Ashram Road  
**Ahmedabad 380 009**  
Tel: 079 4900 4000 / 4010  
e-mail: esp-ahm@LNTEBG.com

L&T Electrical & Automation  
No 38, Cubbon Road  
**Bengaluru 560 001**  
Tel: 080-46136103 / 100  
e-mail: esp-blr@LNTEBG.com

L&T Electrical & Automation  
131/1, Zone II, Maharana Pratap Nagar  
**Bhopal 462 011**  
e-mail: esp-bho@LNTEBG.com

L&T Electrical & Automation  
Plot No. 559, Annapurna Complex, 2nd Floor  
Lewis Road  
**Bhubaneswar 751 014**  
Tel: 0674-2436690 / 9437453579 / 9437284376  
e-mail: esp-bsr@LNTEBG.com

L&T Electrical & Automation  
Aspire Towers, 4th Floor  
Plot No. 55, Phase-I  
Industrial & Business Park  
**Chandigarh 160 002**  
Tel: 0172-4646840 / 41 / 42 / 44 / 53  
e-mail: esp-chd@LNTEBG.COM

L&T Electrical & Automation  
L&T Construction Campus  
TC-1 Building, II Floor  
Mount-Poonamallee Road  
Manapakkam  
**Chennai 600 089**  
Tel: 044-2270 6800  
e-mail: esp-maa1@LNTEBG.com

L&T Electrical & Automation  
Building E3A, Manufacturing Facility  
L&T Bypass Road, Malumichampatti  
**Coimbatore 641 050**  
Tel: 0422-6683031  
e-mail: esp-cbe@LNTEBG.com

L&T Electrical & Automation  
3rd Floor, 1&2 Vijay Park,  
Main Chakrata road  
Ballapur Chowk  
**Dehradun 248001**  
Tel: +91 9582252411

L&T Electrical & Automation  
Khairasol, Degaul Avenue  
**Durgapur 713 212**  
Tel: 0343-2540448 / 2540449 / 2540443  
e-mail: esp-dgp@LNTEBG.com

L&T Electrical & Automation  
5, Milanpur Road, Bamuni Maidan  
**Guwahati 781 021**  
Tel: +91 8876554417  
e-mail: esp-ghy@LNTEBG.com

L&T Electrical & Automation  
2nd Floor, Vasantha Chambers  
5-10-173, Fateh Maidan Road  
**Hyderabad 500 004**  
Tel: 040-67015052  
e-mail: esp-hyd@LNTEBG.com

L&T Electrical & Automation  
Monarch Building, 1st Floor  
D-236 & 237, Amrapali Marg  
Vaishali Nagar  
**Jaipur 302 021**  
Tel: 0141-4385914 to 18  
e-mail: esp-jai@LNTEBG.com

L&T Electrical & Automation  
Akashdeep Plaza, 2nd Floor  
P. O. Golmuri  
**Jamshedpur 831 003**  
Jharkhand  
Tel: 0657-2340502 / 08  
e-mail: esp-jam@LNTEBG.com

L&T Electrical & Automation  
Skybright Bldg; M. G. Road  
Ravipuram Junction, Ernakulam  
**Kochi 682 016**  
Tel: 0484-4409420 / 4 / 5 / 7  
e-mail: esp-cok@LNTEBG.com

L&T Electrical & Automation  
3-B, Shakespeare Sarani  
**Kolkata 700 071**  
Tel: 033-48006001  
e-mail: esp-kol@LNTEBG.com

L&T Electrical & Automation  
No. 10, Fortuna Tower, 2nd Floor  
Rana Pratap Marg, Near NBRI  
**Lucknow 226001**  
e-mail: esp-lko@LNTEBG.com

L&T Electrical & Automation  
No: 73, Karpaga Nagar, 8th Street  
K. Pudur  
**Madurai 625007**  
Tel: 0452-2567405 / 2561068 / 2561657  
e-mail: esp-mdu@LNTEBG.com

L&T Electrical & Automation  
L&T Business Park, TC 2, Tower 'B'  
3rd Floor, Gate No 5  
Saki Vihar Road, Powai  
**Mumbai 400 072**  
Tel: 022-67052874 / 2737 / 1156  
e-mail: esp-bom@LNTEBG.com

L&T Electrical & Automation  
Unnati Building, 2nd Floor  
Automation Campus  
A-600, TTC Industrial area  
Shil-Mahape road, Mahape  
**Navi Mumbai 400710**  
Tel: +91 22 67226502 / 67226300

L&T Electrical & Automation  
12, Shivaji Nagar  
North Ambajhari Road  
**Nagpur 440 010**  
Tel: 0712-2260012 / 6606421  
e-mail: esp-nag@LNTEBG.com

L&T Electrical & Automation  
32, Shivaji Marg,  
Near Moti Nagar,  
P. O. Box 6223  
**New Delhi 110 015**  
Tel: 011-41419514 / 5 / 6  
e-mail: esp-del@LNTEBG.com

L&T Electrical & Automation  
Grand Chandra, 2nd Floor  
Fraser Road  
Opposite Doordarshan Kendra  
**Patna 800001**  
e-mail: esp-patna@LNTEBG.com

L&T Electrical & Automation  
L&T House  
P. O. Box 119  
191/1, Dhole Patil Road  
**Pune 411 001**  
Tel: 020-48544395 / 48544279  
e-mail: esp-pnq@LNTEBG.com

L&T Electrical & Automation  
Crystal Tower,  
4th Floor, G. E. Road  
Telibandha  
**Raipur 492 006**  
Tel: +91 9755508228  
e-mail: esp-raipur@LNTEBG.com

L&T Electrical & Automation  
3rd Floor  
Vishwakarma Chambers  
Majura Gate, Ring Road  
**Surat 395 002**  
Tel: 0261-2473726  
e-mail: esp-sur@LNTEBG.com

L&T Electrical & Automation  
Radhadaya Complex  
Old Padra Road  
Near Charotar Society  
**Vadodara 390 007**  
Tel: 0265-6613610 / 1 / 2  
e-mail: esp-bar@LNTEBG.com

L&T Electrical & Automation  
Door No. 49-38-14/3/2, 1st floor,  
NGGO's Colony, Akkayapalem,  
**Visakhapatnam 530 016**  
Tel: 0891-2791126 / 2711125  
e-mail: esp-viz@LNTEBG.com

Product improvement is a continuous process. For the latest information and special application, please contact any of our offices listed here. Product photographs shown for representative purpose only.



### L&T Electrical & Automation, Electrical Standard Products

L&T Business Park, TC-2, Tower B, 3rd Floor, Gate No. 5, Saki Vihar Road, Powai,  
Mumbai - 400 072, INDIA [www.lntebg.com](http://www.lntebg.com)

### Customer Interaction Center (CIC)

BSNL / MTNL (toll-free): 1800 233 5858 Reliance (toll-free): 1800 200 5858  
Tel: 022 6774 5858 Email: [cic@lntebg.com](mailto:cic@lntebg.com) Web: [www.lntebg.com](http://www.lntebg.com)